


# Lubrina Oil Lamp Problem

- Follow the manual when the oil lamp(s) is/are blinking even if oil is not empty.

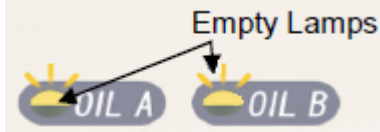

1. Remove the rear cover - there are 5 screws shown in the pictures



(Bottom part)




(Left part)



(Back part)

2. Clean the surface of sensor(s) and oil tubing(s) by a gauge/cloth damped with alcohol (Ethanol). Remove the PCB for cleaning if needed.

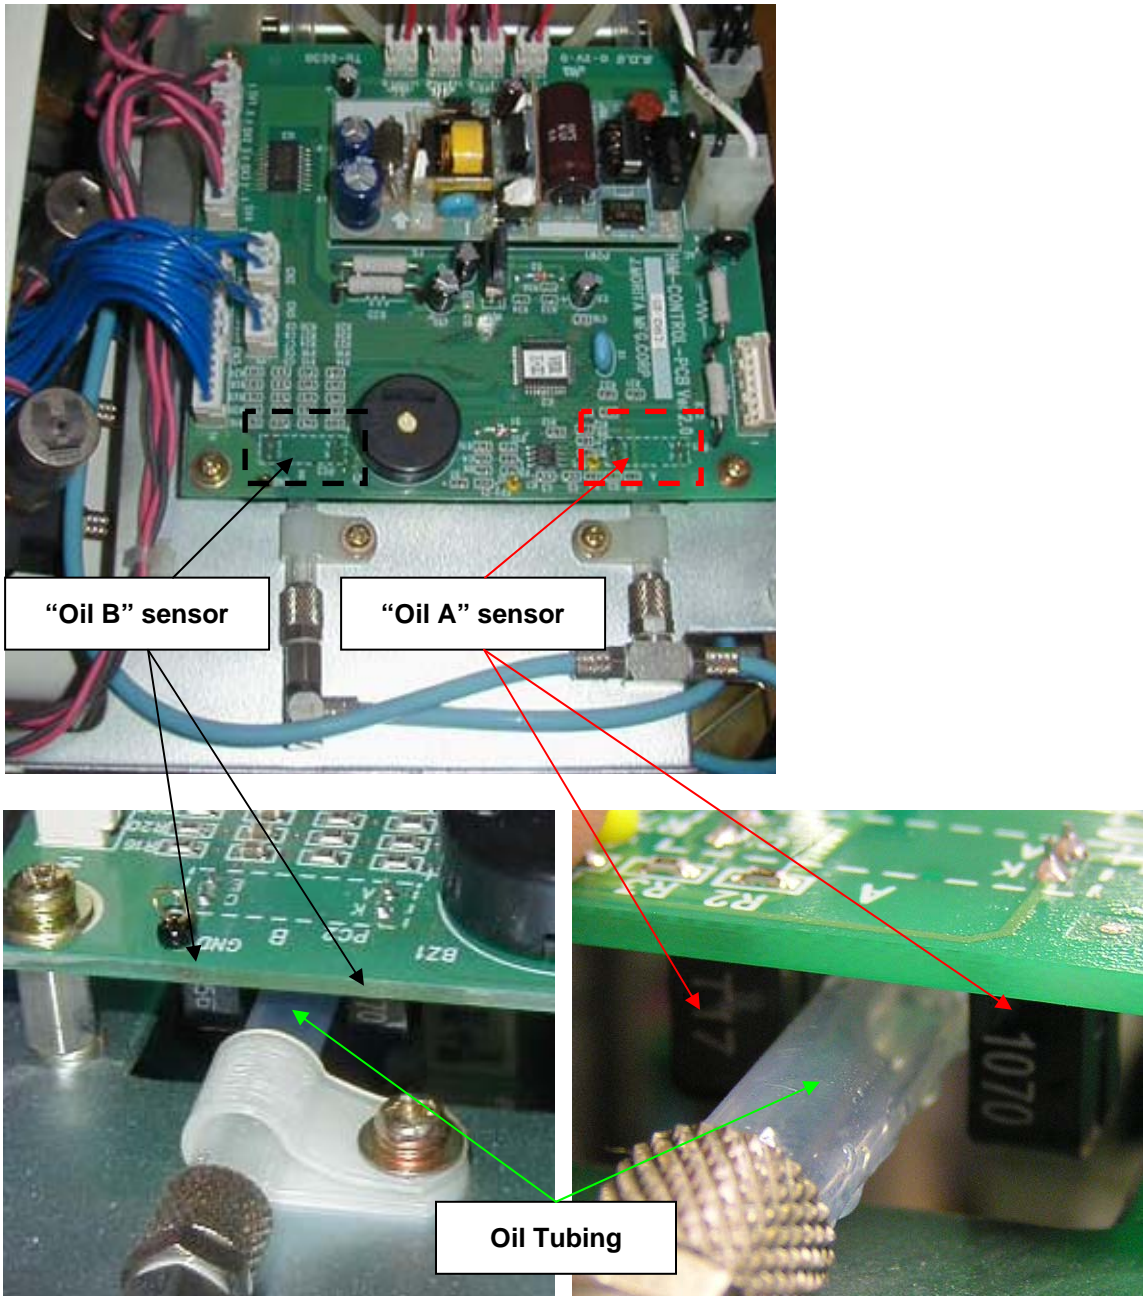

3. Put the rear cover back
4. Make sure that the unit works back to the normal condition.